

Worktop assembly

1. Place a rug on the floor, place the worktop on it and place the frame upside down to protect the worktop



2. The size of the frame is 10 cm shorter than the worktop. If your work surface is 120 x 80, set the width of the frame to 110 cm




3. The control cord is located between the worktop and the upper crossbar




4. Measure whether all sides are the same distance



5. Tighten the screw. Pre-drilling is not necessary

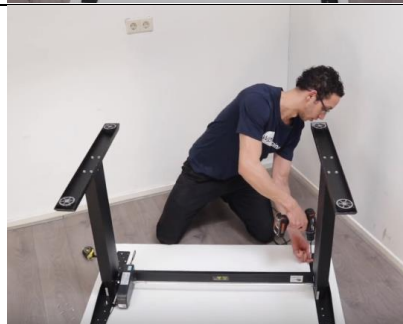

6. If this step-by-step plan is still unclear to you, watch the montage video "Assemble worksheet" on our Worktrainer YouTube channel, see the link on the right

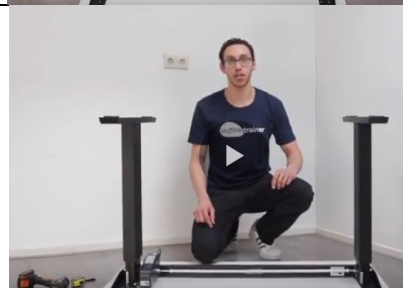

<https://youtu.be/9Dp5pL85QjQ>